60301014GB.fm Page 1 Thursday, March 2, 2006 3:30 AM



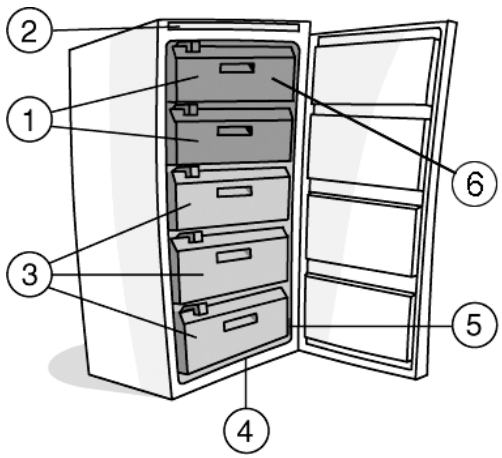


1. Compartment for freezing
2. Control unit
3. Area for drawers and pull out baskets/doors
4. Pull-out defrost water drain
5. Rating plate (on the inside of the appliance)
6. Ice packs (if provided) - ice cubes.

storage compartment

freezer compartment

**Note: the design of drawers and accessories may vary, depending on the model.**

**Controls** (depending on model)

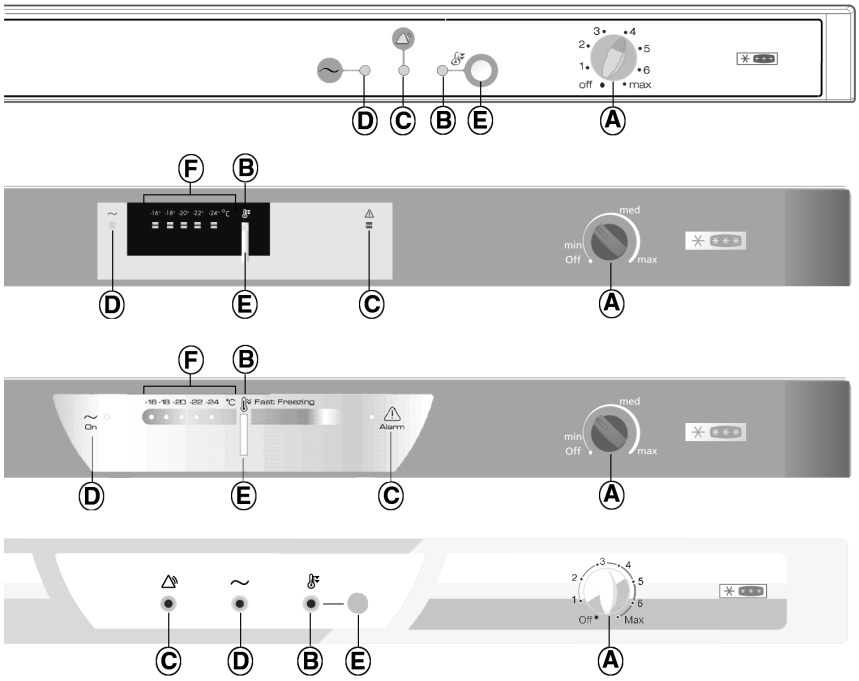


**A** Thermostat knob.

**B** Yellow LED: indicates that the fast freeze function is in operation.

**C** Red LED: indicates that the freezer internal temperature is too high.

**D** Green LED: indicates that the appliance is connected to the power supply.

**E** Fast freeze button.

**F** Electronic thermometer

### Freezer compartment temperature adjustment

The appliance is normally factory set for optimum operation at a temperature of -18°C.

To adjust the compartment temperature, proceed as follows:

- Turn the thermostat knob **A** to **1/Min** for a storage temperature that is less cold.
- Turn the thermostat knob **A** to **7/Max** for a colder storage temperature.
- Turn the thermostat knob **A** to ● to switch off the freezer (the appliance is still connected to the mains power supply).

### Model with electronic thermometer

- The LED indicates the highest temperature reached inside the appliance. For optimum food storage, set the thermostat at a temperature of -18°C. The introduction of large amounts of food and frequent opening of the door can temporarily affect the internal temperature of the appliance.
- To deactivate the fast freeze function, press the button **(E)**; if the fast freeze function is not manually deactivated, after approx. 48 hours the appliance will automatically deactivate it.
- When the appliance is switched on, all the LEDs light up in sequence for a few seconds, after which the appliance begins operation.

### Alarm signals

| | Signal | Cause | Solution |
|---|---|---|---|
| **Temperature alarm** | The red LED lights up **C** | The internal temperature is above -12°C | Press button **E** until the temperature returns below -12°C again |
| **Electronic thermostat fault alarm (for models with electronic thermostat)** | The green LED **D** and the yellow LED **B** light up and blink | Electronic card fault | Contact After-sales service. The appliance still operates, guaranteeing correct storage of food |

### Defrosting

1. To switch off the freezer, turn knob **A**.
2. Unplug the appliance or switch off at the main switch.
3. Fit the drain in place (see figure).
4. Follow the instructions given in the instructions booklet.
5. Plug in the appliance once again.
6. To switch on the freezer again, turn knob **A**.

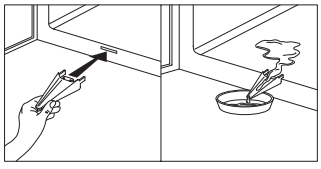

Follow the steps detailed in “Switching on the appliance”.